


CMS – MCA > Fault Code 1/2

- Each effect and message is identified at A/C level by a **unique Fault Code**
 - ▶ xxxx = Source ATA reference of the system (4 digits)
 - ▶ y = Letter related to fault type:
 - ▶ H → Dispatch Message
 - ▶ W → ECAM Warning
 - ▶ F → Avionics/ASFC Maintenance Message
 - ▶ L → OSFC Maintenance Message
 - ▶ zzz = 3 digits based on FMC, Bite identifier and Side

xxxxyzzz:

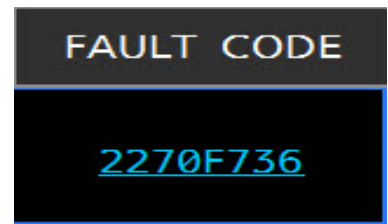

FC is the unique information presented in PFR to identify a message

CMS – MCA > Fault Code 2/2

● Fault Code Letter xxxxYzzz :

Effect observer	Effect/MM	Letter	Effect type	Description
Cockpit	<i>RFDE</i>	W	ECAM Warning	Warning displayed on Warning page
		H	Dispatch Message	Dispatch Message displayed on Dispatch page
	<i>NRFDE</i>	X	Cockpit local effect	All events such as flags, advisories, abnormal indications which can be shown on the relevant display
		C	Cockpit crew observation	All malfunction descriptions which cannot be categorized in a specific section
		N	Inoperative System	Inoperative System messages shown to the crew
Cabin	<i>NRFDE</i>	B	Cabin local effect	All events such as messages displayed on cabin crew terminals
Maintenance		E	Cabin crew observation	All malfunction descriptions which cannot be categorized in a specific section
		J	Cargo local effect	All local events on the cargo system
Maintenance	<i>NRFDE</i>	T	Maintenance crew observation	All malfunction descriptions which cannot be categorized in a specific section
		K	Maintenance local effect	Flags, advisories, abnormal indications which can be shown on the OMS
		Z	Informative effect	Informative effect displayed on the OMS
-	<i>MM</i>	F	Maintenance Message	All maintenance messages sent by the system BITE function to the CMS
		L	Maintenance Message	All maintenance messages sent by the LMF to the MCA